

HOW TO USE THE SCALE

Place the scale on a rigid horizontal flat surface.

Press ON/OFF button to switch on the scale and wait until "0.0" is shown on the display screen.

Please make sure the scale is under the environment with stable temperature.

Place the object(s) on the center of the platform. Wait until the display is stable and check the readout.

Press MODE button to choose different weighing units.

After use, press and hold ON/OFF about 3 seconds to switch off the scale.

HOW TO USE TARE FUNCTION

Tare function can make it easier to weigh tiny things or liquid.

Turn on the scale. Place the container of weighing object(s) on the center of the platform, press TARE button and the screen shows "0.0".

Take the container off and place the item(s) in the container and put the container again on the center of the platform.

Wait until the screen is stable then check the readout.

HOW TO CALIBRATE THE SCALE

Turn on the scale. Press the CAL button and the screen will show CAL. Empty the platform and press CAL again.

The CAL display will blink and follow with the required calibration weight, place the required weight on the platform.

The screen will show PASS then go back to weighing mode. The calibration is done. If it is still not accurate enough, you may calibrate it again.