
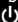


## HOW TO USE THE SCALE

Press  button to switch on the scale and wait until "0.0" is shown on the display screen. Place the object(s) on the center of the platform. When the display is stable check the readout. Press UNIT button to switch between the weighing units. Press  again to turn off the scale after use.

## HOW TO USE TARE FUNCTION

Turn on the scale. Place the empty container of weighing object(s) on the center of the platform, press TARE button and the screen shows "0.0". Take the container off and place the item(s) in the container then place the container again on the center of the platform. The readout is the net weight of the item(s) in the container.

## HOW TO USE COUNTING FUNCTION

Turn on the scale. Place sample (25, 50, 75 or 100 pcs) on the platform. Press and hold the PCS button until the screen shows "25". Press UNIT button to switch the sample size accordingly. Press PCS button again to confirm. You will see a small "pcs" on the screen and it's ready to count. Press PCS any time to switch to weighing mode.

## HOW TO CALIBRATE THE SCALE

Turn on the scale. Press and hold the UNIT button until CAL is shown on the screen. Empty the platform. Press UNIT button once and the CAL will blink and then change to 1000.0g (or 100.00g)\*. Place a 1000 (or 100)\* gram calibration weight on the platform. The screen will show PASS then go back to weighing mode. The calibration is completed. If it is still not accurate enough, please calibrate again.

---

\* 1000 g is for 1000/0.1g model. 100 g is for 100/0.01g model.